


↓ Skinne system

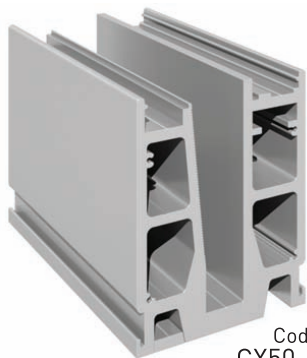


Code: CX50-7646



Skruer til treverk: 10x100mm senkhode




Betongskruer 8x95mm med senkhode

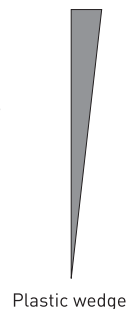

Plastic wedge




PVC Protection sheets

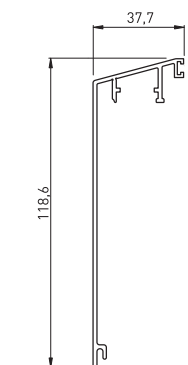


Code: CX50-7647





Code: CX50-7647K

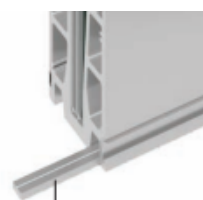


Code: PR-7649



↓ Montasje detaljer

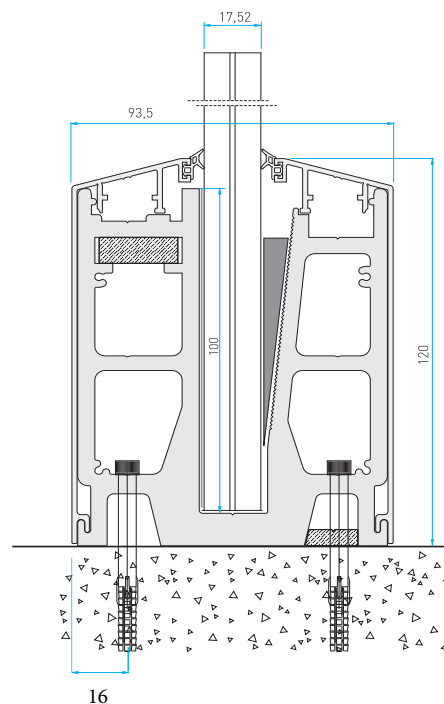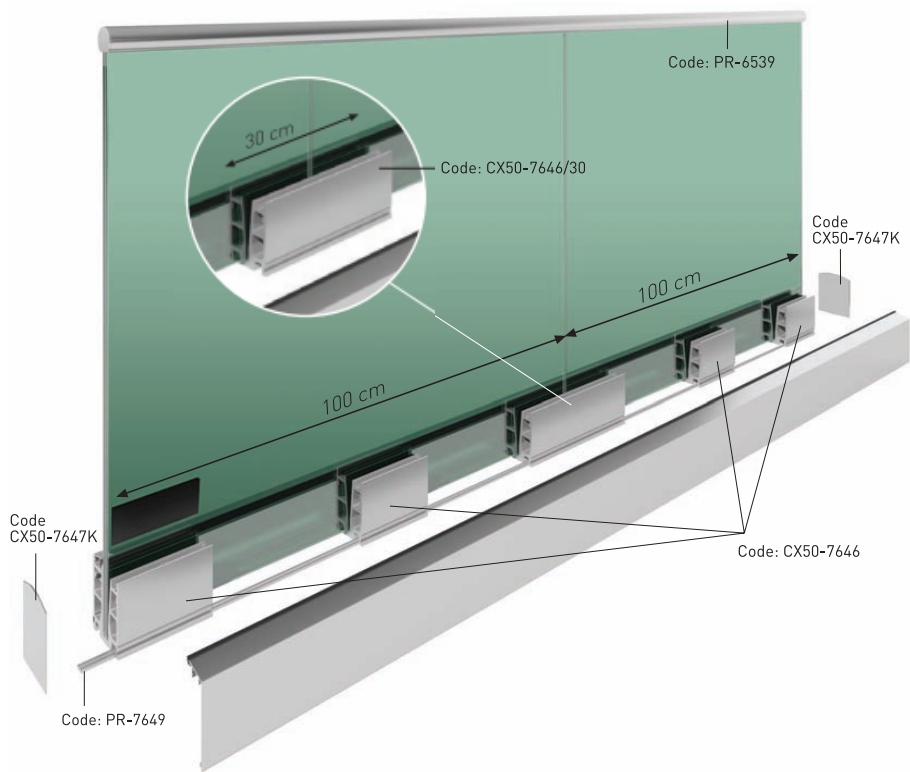

↓ Håndlist



Code: PR-6540



Code: AK-6540TA



Code: AK-6540V



Code: AK-6540H



Code: AK-6540KD